



Explorer

Operators Guide



SCANIA

3 Axle Chassis

(13.5 and 14.5 Metre versions)

All rights reserved by the Technical Center of Bus & Coach International Pty Ltd

Note: The content of this Operators Guide is to provide as much relevant information to the operator as possible. It will also contain information on factory optional equipment, which may or may not be included in your vehicle.

Version	Date	Prepared	Document No
1.0	Oct-2026	DD	HB-BCI-SD-0080-26

Bus and Coach International Pty Ltd

Welcome to BCI

Congratulations on selecting a vehicle from the Bus and Coach International (BCI) range of high-quality products. We are confident that you will appreciate its exceptional craftsmanship and performance.

This **EXPLORER** is renowned for its quality, safety, and comfort. Built on a premium European chassis (OEM), it offers smooth handling, high performance, quiet operation, with outstanding fuel efficiency.

We strongly recommend that you:

- Read and understand this Operator's Guide, as it contains important information on the safe operation and optimum performance of your BCI **EXPLORER**.
- Contact your authorised BCI Dealer if you have any questions or are unsure about any aspect of operating the vehicle.

BCI is not responsible for any loss or damage resulting from improper use of the product.

Every effort has been made to ensure the information in this guide was accurate at the time of producing.

We wish you safe and pleasant journey.

1.0 Contents

1.0 Contents	2
1.0 Using this guide.	4
2.0 Vehicle Information	5
3.0 Warranty	5
4.0 Technical Specifications	6
4.1 Body	7
5.0 Driver's seat	9
6.0 OEM Instrumentation and controls.....	10
7.0 OEM Steering column stalks and controls.....	11
7.1 Indicator and high beam	11
7.2 Windscreen wipers and washers.....	11
7.3 Scania lighting panel	11
7.4 Drive mode selector	12
7.5 Opticruise mode selector	12
7.6 Retarder stalk.....	12
7.7 OEM Chassis control switches.....	13
7.8 Park Brake.....	13
8.0 Body switches	14
8.1 Body warning lights.....	15
9.0 360° Camera system	16
10.0 Seat Belt Check (Option).....	16
11.0 Saloon information system	17
12.0 Mirror control	17
13.0 Battery Master switch	17
14.0 Rear engine controls.....	18
15.0 Vehicle access	19
16.0 Ignition key	19
17.0 Sleep mode.....	20
18.0 Steering wheel lock	20
19.0 Emergency exits	21
19.1 Emergency Internal operation	21
19.2 Emergency external operation.....	21
19.3 Emergency roof exits.....	22
19.4 Fire suppression system (option).....	22

19.5 Emergency shut off	23
19.6 Emergency interlock override	23
19.7 Emergency release luggage bins.....	23
20.0 Door maintenance button	24
21.0 Additional systems and operating parameters	24
21.1 Luggage door warning.....	24
21.2 Rollaway function	24
21.3 Lighting	25
21.4 School Lights	25
21.5 Child Check	26
21.6 Belt Check	26
22.0 Accessory systems	26
22.1 Air conditioning	26
22.2 Mobile climate control	26
22.3 Coachair controller.....	26

1.0 Using this guide.



INFORMATION

Vehicle specifications, equipment, systems, controls, and optional features may vary between individual vehicles depending on model, customer requirements, production changes, and optional equipment fitted.

As a result, some information, illustrations, controls, or features described in this Operator's Handbook may differ from those fitted to the actual vehicle.

Operators should always familiarise themselves with the specific vehicle before operation and follow any vehicle-specific instructions, labels, or supplementary information supplied with the vehicle.

This guide is intended to help vehicle operators maximise the performance of the **EXPLORER** product. It is the owner's/operator's responsibility to ensure the vehicle is operated in full compliance with all applicable laws and regulations in the region of use.

Operate the vehicle with care and diligence. BCI is not liable for any loss resulting from improper use of the product.

This document contains critical safety messages designed to prevent personal injury. It is essential to follow all safety instructions provided to avoid injuries or fatalities. Pay close attention to the symbols and layouts highlighted in this guide.

This guide is intended for the body only; for additional technical chassis information, please consult your nearest OEM-authorized service centre



WARNING

Indicates an imminent dangerous situation which, if not avoided, could result in death or serious injury.



HAZARD

Additional information which is important but not threatening to life and/or systems.



INFORMATION

Additional information which is important but not threatening to life and/or systems.



INFORMATION

Additional information or verification is via **SCANIA's** authorised dealer network. **SCANIA's** dedicated driver's guide is available on-line through any APP store.

2.0 Vehicle Information

WARNING

Operate the vehicle in compliance with all applicable laws, regulations, and statutory requirements. **BCI** will not be responsible for any loss or damage resulting from improper use of the product.

Vehicle identification number (VIN) is located in two places:

1. On vehicle identification plate located in the front door entry steps.
2. VIN is stamped on the chassis structure behind the right-hand front steer tyre.

3.0 Warranty

INFORMATION

Additional warranty information can be found on the **BCI Warranty Guide**, supplied with the vehicle at the time of delivery.



INFORMATION

*For additional information or verification on any OEM warranty, contact a **Scania** authorised dealer*

The **BCI** body warranty is limited to **150,000km** or **three (3) years**, whichever comes first. Other body Supplier warranties such as air conditioning, destination equipment etc. will be covered directly by the Supplier's warranty and can be taken to a Supplier's outlet for rectification.

All warranty repairs must be carried out by authorised **BCI** dealer or agent. Failure to comply will result in the warranty claim being rejected. Contact your nearest **BCI** dealer or agent for further assistance.

Limiter liability:

BCI's liability under this warranty is limited exclusively to the repair and replacement of defective parts in materials or workmanship by a **BCI** Dealer at their place of business during normal business hours. This liability specifically excludes any costs associated with hiring a vehicle, transportation to the dealer, and compensation for loss of use of the vehicle during warranty repairs.

4.0 Technical Specifications



INFORMATION

The technical specification serves as a guide. Each vehicle may vary based on the chassis and customer-specific variations or requirements.



INFORMATION

For additional information or verification on any OEM warranty, contact a **Scania** authorised dealer

Body Dimensions (13500 Version)

Overall L × W × H	13500 * 2495 * 3810
Wheelbase	6210 + 1500
Front overhang	2750
Rear overhang	3040
Body Mass (approx.) (Vehicle with 54 seats)	15,600kgs
Approach angle / departure angle (full load) (°)	7.9 / 8.7

Body Dimensions (14500 Version)

Overall L × W × H	14441 * 2495 * 3810
Wheelbase	7010 + 1500
Front overhang	2891
Rear overhang	3040
Body Mass (approx.) (Vehicle with 58 seats)	16,400kgs
Approach angle / departure angle (full load) (°)	7.9 / 8.7

Vehicle Mass (Kg)

Gross Vehicle Mass (GVM)	22,000kgs
Maximum axle laden mass (front / rear)	7,500 / 19,000

Performance Parameters

Maximum Speed (km/h)	≥100
Maximum angle of grade ability (%)	≥38%
Minimum diameter of turning (m)	≤25mtrs

Engine

SCANIA	Euro 6 - 13L. DC13 500 hp
--------	---------------------------

Transmission

Scania	12 SPEED -Scania Opticruise
--------	-----------------------------

Axles

Front	Scania AMI580SA
Rear	Scania AD400SA
Lazy	Scania AM66IS

Rims and tyres

Rims	8.25 x 22.5 Scania
Tyres (Front / Rear)	295 / 80R22.5 Scania


Brakes	
Scania	Electronic Braking System (EBS) with integrated Anti-lock Braking System (ABS), Brake Blending, Hill Start Aid, Brake Assist. SCANIA Electronic Stability Program (ESP) and built-in hydraulic retarder available as standard.
Electric Equipment	
Circuit system	Single wire system, Negative earth
Circuit voltage	24V
Alternator	150A x 2
Storage battery	2 x (12 v 230Ah)
Instrument Panel	Combination instrument panel, including Odometer, Tachometer, Intelligent signal processor, Voltage meter, Water TEMP gauge, Oil-pressure gauge, Fuel-level gauge, Air-pressure gauge, Indicators for high beam lights etc.
Fuel Tank	
Aluminium tank	400/600/800 (depending on vehicle variation)
Adblue Tank	80 Litres

4.1 Body


The vehicle body is a monocoque construction, made with Australian galvanize steel tube. It's designed to comply with ADR 59 roll-over requirements. The main framework components have been treated to ensure anti-rust properties.

Vehicle doors and panels	
BCI	Easy access aluminium frames and panels, with fibreglass side stretch panels.
Vehicle windows	
BCI	The front windscreen is laminated glass; the side windows are 4mm thick toughened glass with a dark grey tint. All glass is fully bonded to the body.
Seats	
Passenger	All seats are approved for public transportation and are available in fixed back, reclining or metro configurations subject to customers' requirements.
Driver's Seat	ISRI controls & 3-point safety belts.
Air Conditioning	
Coach Air	MCC Husky 45 Heat / Cool.
Heating	Floor heaters (optional).
Demister	Front installed demister unit with 2 speed fan.
Interior trim	
Accessories	Digital clock, driver's side sun visor, electric front windshield sun visor, interior rear-view mirror, and emergency hatches. Electrical devices: Driver's microphone, Harine 10.1-inch central multi-function touchscreen media, 12v USB.

13.5 Metre version

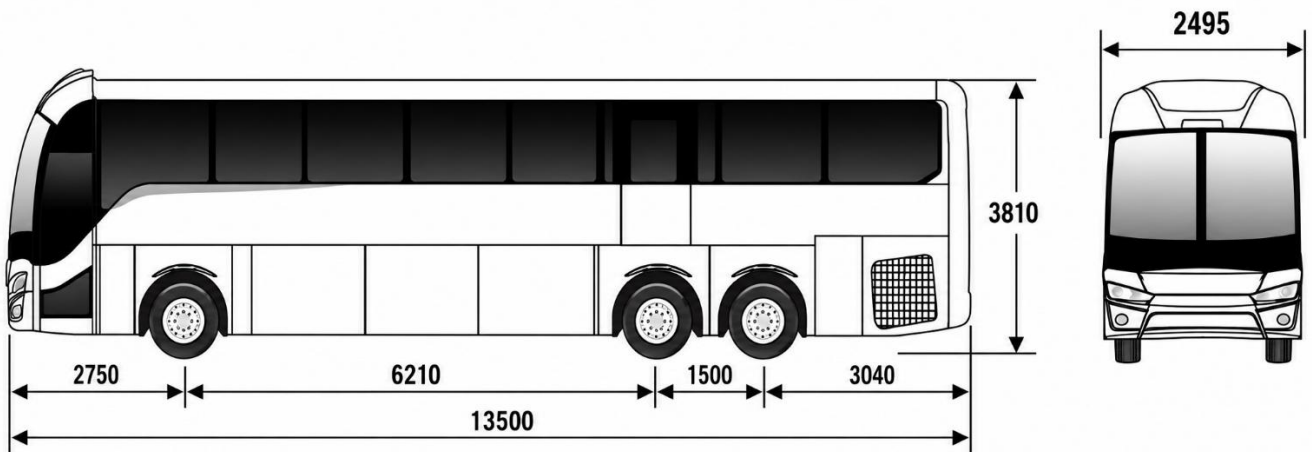

14.5 Metre version

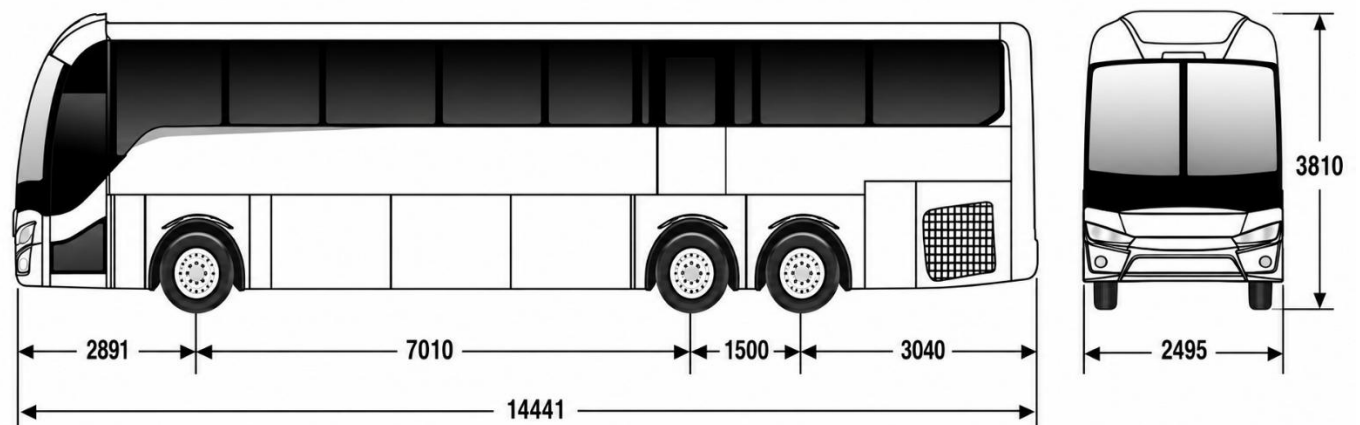

5.0 Driver's seat



Warning

Always apply park brake before leaving driver's seat. Dash warnings and alarms will be activated if the seat belt is removed at any time the park brake is not applied.



Hazard

The ergonomic design of the driver's seat is essential for comfort, safety, and efficiency. A properly adjusted seat reduces the risk of injuries, minimises fatigue, and enhances overall productivity.

ISRI® 6860/875 NTS, with advanced design incorporating third generation suspension technology ensures maximum safety and comfort. Efficient operating weight range of 50 to 150kg, integrated 3-point seat belt, integrated head restraint, adjustable vertical shock absorber, integrated pneumatic system (IPS) dual stage air lumbar with lateral support. * Location of controls could vary depending on specifications.




1	Belt adjustment	8	Vertical shock absorber
2	Armrest adjustment	9	Quick release
3	Backrest adjustment	10	Horizontal isolator
4	Shoulder adjustment	11	Seat cushion adjustment
5	Seat climate control	12	Horizontal adjustment
6	Integrated pneumatic system(IPS)	13	Tilt adjustment
7	Height adjustment(+memory)		

6.0 OEM Instrumentation and controls



INFORMATION


The following is a quick reference guide only. For detailed information on any of the OEM equipment or systems, please refer to the SCANIA “**Driver’s Guide**” or contact an authorised dealer

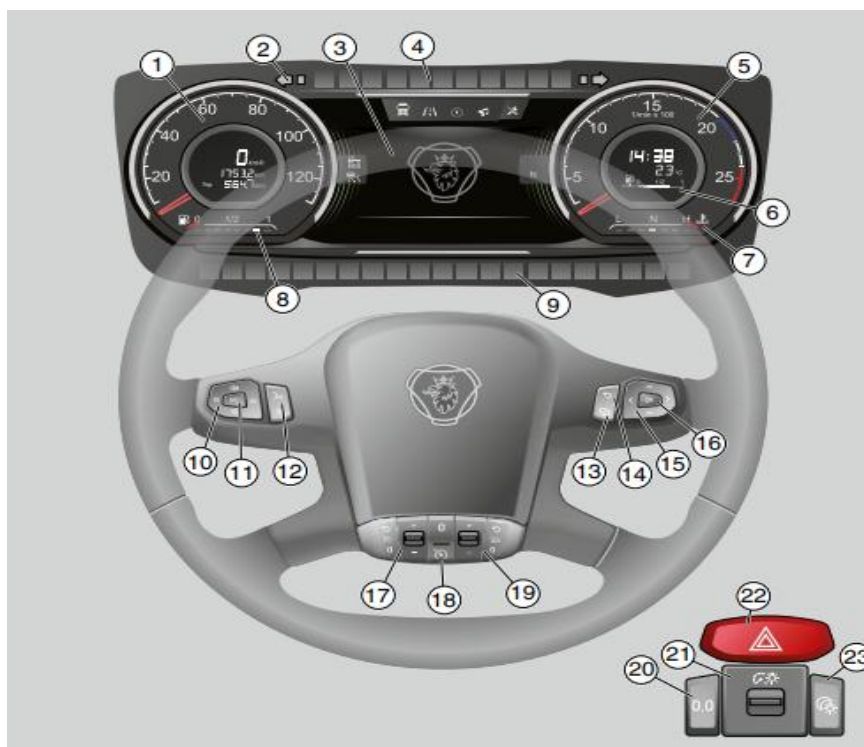

1	Speedometer.	13	Instrument cluster: quick selection
2	Direction indicator.	14	Instrument cluster: back button
3	Display.	15	Instrument cluster: menu navigation
4	General warning symbols.	16	Instrument cluster: OK button
5	Tachometer.	17	Cruise control
6	Display showing reductant level, outdoor temperature and clock.	18	Adaptive cruise (<i>Option</i>)
7	Coolant temperature gauge.	19	Downhill speed control (<i>Option</i>)
8	Fuel level gauge.	20	Trip meter
9	Indicator lamps and warning symbols.	21	Adjusting the lighting in instrument cluster
10	Radio: Change track, station (<i>Option</i>)	22	Hazard warning button
11	Radio: selection of audio source (<i>Option</i>)	23	Night lighting in the instrument cluster
12	Radio: volume control (<i>Option</i>)		


7.0 OEM Steering column stalks and controls

7.1 Indicator and high beam

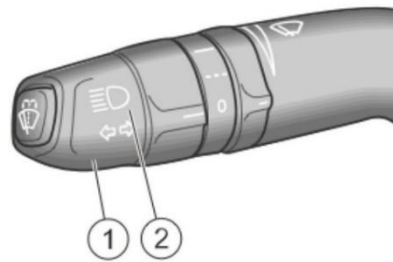


1	Directions of indicators	2	Main and dipped beams
---	--------------------------	---	-----------------------

7.2 Windscreen wipers and washers

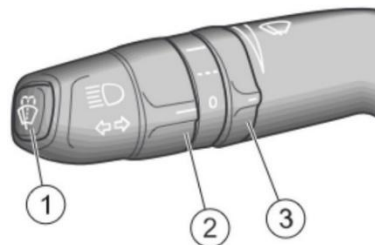

1	Windscreen wiper and washer: Press the end of the level	3	Windscreen wipers” turn the ring to select the wiper interval speed.
2	Windscreen wiper: turn the ring to start the windscreen wiper and select the speed.		

7.3 Scania lighting panel

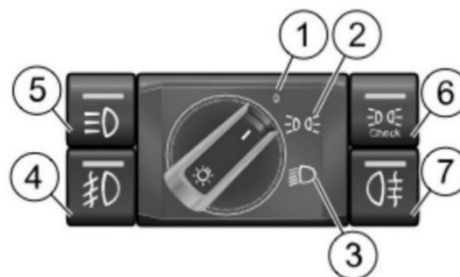

1	Position 0 (off)	5	Spotlight
2	Position lamp position	6	Testing the external lighting
3	Main beam and dipped beam position	7	Rear foglight
4	Front foglight		

7.4 Drive mode selector


- **R** = Reverse (R)
- **N** = Neutral (N). Used when starting the engine, for long stops and when parked.
- **D** = Forward drive mode, all gears are used.



The selected drive mode is shown in the display.
If a choice of gear is prevented, the drive mode symbol flashes in the display.

7.5 Opticruise mode selector

Vehicles with Opticruise have a lever you can choose drive mode, change gear and switch between automatic and manual gear changing.

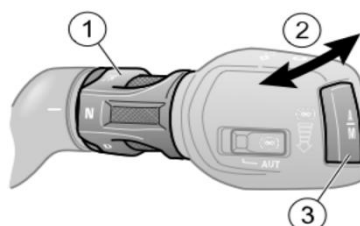


1	Drive mode selector	3	Automatic gear changing A or manual gear changing M
2	Changing up and down		

- Move the drive mode selector towards the steering wheel before turning it to position R.
- Move the Opticruise lever towards you to change up (+) or away from you to change down (-).
- Select between automatic gear changing **A** or Manual gear change **M**.

The Opticruise lever can appear differently depending on the vehicle's configuration.

7.6 Retarder stalk

The retarder is an auxiliary brake designed for prolonged braking applications. To function efficiently, the engine speed must be above 1,800 RPM.

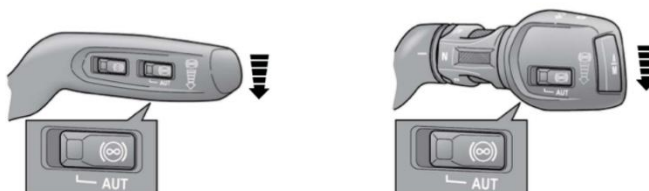


To activate the automatic retarding, place the slide control into the on (AUT) position. To adjust the braking effect, move the lever to 1 of 6 positions. As you move the lever downwards, the braking effect gradually increases. After braking, return the lever to position 1 to prevent auxiliary braking from engaging when you stop accelerating.

7.7 OEM Chassis control switches



1	Kneeling switch : Up and Down	5	Traction control: on/off switch
2	Kneeling: Return to normal drive height	6	Lane departure warning: on/ off switch
3	Lazy axle load transfer	7	Advanced emergency braking (AEB): deactivation.
4	Accessory mode switch.		

7.8 OEM suspension controls

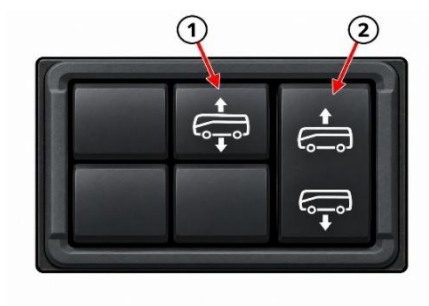

1	Return to normal ride height	2	Suspension raise and lower
---	------------------------------	---	----------------------------

7.9 Park Brake

Always apply the parking brake before leaving the driver's seat. The parking control is positioned on the right-hand of the instrument panel.

The parking brake control.

1. To release, press down on the control as far in as it will go while:

-putting your foot on the brake pedal.

or

-depressing the accelerator pedal with a gear engaged.

2. To apply, pull up on the control to its maximum position.

Red warning will illuminate in the instrument cluster.



8.0 Body switches



INFORMATION

Switch availability and placement will vary based on customer configurations or specific model variations

Icon	Description		Operation
	Windscreen demister		Three position switch : - Up is off - Middle is low speed - Down is high speed
	Rear view mirror mode adjustment switch		Pressing the switch adjusts the contrast of the mirror monitors.
	Driver's window switch		Press bottom of switch to open and top of the switch to close driver's window.
	Spotlights (Bull Bar)		Press to activate spotlights with high beam.
	RED / Passenger door control		Push bottom on the switch open door and press top of the switch to close door.
	Drivers fan switch		Press to activate drivers' fan (2 speed)
		Blind switch	Left and right front blinds / press bottom of the switch to lower the blind / press top of the switch to raise the blind.
	Air / electric horn switch		Press bottom of the switch for air horn / press top of the switch for electric horn.
	Interior saloon lights		Two position switch : - Up is low intensity - Down is high intensity.
	Passenger reading light switch		Press bottom of the switch to activate Press on top of the switch to deactivate
	Aisle light switch		Press bottom of the switch to activate under seat lighting. Press on top of the switch to deactivate.

	Luggage bin lights	Press bottom of the switch to activate lights in luggage compartment / press top of switch to deactivate.
	Luggage bin locks	Press to lock and unlock luggage bins.
	TV control switch	Press bottom of the switch to lower TV / Press top of the switch to raise TV (note ; TV automatically returns to close position if passenger doors is opened)
	School lights	Press bottom of switch to activate school lights / press top of switch to deactivate.
	Mirror heats	Press bottom of the switch to activate mirror heating .
	Destination signage	Press bottom of the switch to activate destination signage / press top to deactivate.
A/C	Air conditioning	Press bottom of the switch to turn on the power supply to AC controller.
WIFI	WIFI switch	Press bottom of the switch to activate WIFI system/ press top of switch to isolate the system

8.1 Body warning lights

	AMBER Wheelchair door is open.		AMBER Sewage tank requires emptying
WC	RED Toilet is occupied		RED Park brake has NOT been applied
	RED Toilet water tank requires water		RED Error has occurred with the door
	RED Seat belt has NOT been fastened		RED An emergency hammer has been removed from its holder.

9.0 360° Camera system

Warning

The 360° camera system is an operator's assistance aid only. It does not replace direct observation or proper lookout. Blind spots, image distortion, poor lighting, dirt, or weather conditions may limit visibility. Always visually check surroundings and follow company manoeuvring procedures before moving the vehicle.

The 360-degree camera system enhances safety by providing a comprehensive view around the vehicle, helping reduce blind spots and improve operator awareness. Multiple cameras mounted around the vehicle combine to create a simulated top-down (360°) view.

On initial vehicle start-up, the operator's monitor briefly displays a 360° fly-overview before switching to a split-screen display, showing a top-down surround view on the left and a forward-facing camera image on the right.

As the vehicle manoeuvres, the camera views automatically change to assist in identifying potential hazards. When reverse gear is selected, the right-hand display switches to a rearward-facing camera view.

Activating the indicator stalk changes the right-hand display to the corresponding side of the vehicle, helping identify potential hazards along that side.



10.0 Seat Belt Check (Option)

The seat belt check system monitors passenger seat belt use and alerts the operator when a seat belt is not fastened. The system is displayed through the 360-degree monitor described in Section 10.0.

When the park brake is applied or the vehicle is travelling above 25 km/h, the monitor will default to displaying the passenger seat configuration.

When the vehicle is travelling below 25 km/h, selecting either reverse gear or activating a turn indicator will automatically switch the monitor to the relevant camera views.

- Grey : The seat is empty and the seat belt is not fastened.
- Red : The seat is occupied but the seat belt is not fastened.
- Green : The seat is occupied and the seat belt is fastened.
- Yellow : The seat belt is fastened but the seat is empty
- White : The seat module is not responding

11.0 Saloon information system

The Saloon Information System provides passengers with important safety and journey-related information through visual and audio messages.

The system can display safety messages, such as fasten seat belt reminders, as well as pre-programmed video and audio messages, including welcome messages, passenger information, and other operator-defined announcements.

For example, a “Welcome on Board” message could be assigned to Switch 1. Each time the driver presses Switch 1, the corresponding message will automatically play through the saloon system.



12.0 Mirror control

To adjust the external rearview mirrors, rotate the toggle switch to the left or right to select the corresponding mirror.

Then, use the toggle to adjust the mirror in the desired direction.



13.0 Battery Master switch

The main power of the vehicle is controlled by the OEM battery master switch located in the battery compartment under the driver's floor area.

Rotate switch clockwise to the **ON** position to supply power from the batteries to the vehicle.

Rotate anti clockwise to disconnect battery supply.



Hazard

Do not switch off the battery master switch if the symbol for the exhaust gas aftertreatment system is displayed . Wait at least **10** seconds after switching to the **OFF** position before switching back to the **ON** position.




INFORMATION

The following is a quick reference guide only. For detailed information on any of the OEM equipment or systems , please refer to the SCANIA “**Driver’s Guide**” or contact an authorised dealer

14.0 Rear engine controls

The **Scania** chassis features an engine operating control panel located in the rear engine compartment. This panel allows for engine start and stop functions, starter isolation, operation of engine compartment lights, and connection of external lighting.

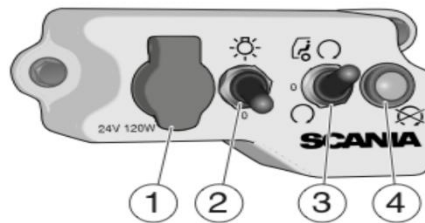

1	External light socket	3	Start and rear isolation switch
2	Engine compartment light	4	Engine stop switch


15.0 Vehicle access

External access to the vehicle is via the vehicle remote (FOB) or external door buttons.

Ensure the passenger door is not locked by:

- Inserting key and rotate clockwise 90° to vertical.
- Rotate handle clockwise 90°, release the handle and it will spring back to original position.
- Rotate key back to original position and remove.

Open the passenger door by pressing button (1) on the remote or green button (1) on the door lock.

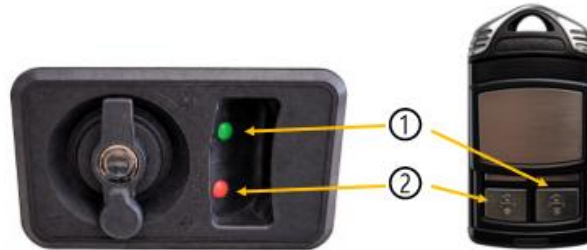

Closing the passenger door by pressing button (2) on remote or the red button (2) on the door lock.

To lock the passenger door:

- Insert key and rotate clockwise 90° to vertical
- Rotate the handle 90° counterclockwise, release the handle and it will spring back to its original position.
- Rotate key back to original position and remove.

16.0 Ignition key



Hazard

Always remove the key from the ignition lock when leaving the vehicle to prevent unauthorised use.

	Position 1 (locked): You stop the engine by turning the key to this position and removing the key. Turn the steering wheel until steering lock engages. Position and hazard lights and some other functions will still operate.
	Position 2 (Radio): When in this position, the vehicle's radio works without any time limits.
	Position 3 (Drive): All electrical systems are engaged. The warning lamps for battery level, oil pressure, brake pressure, etc light up
	Position 4 (Start): The starter motor is engaged in this position. When you release the key, it springs back to the drive position 3.

17.0 Sleep mode

Sleep mode is a low-power state that the vehicle enters after 2–3 minutes of inactivity. This function helps conserve battery power to ensure adequate voltage when reactivation is needed.

The activation of any of the following vehicle inputs will either prevent sleep mode from initiating or wake the vehicle from sleep mode.

- Door activity, either opening or closing.
- Key activation in either position 1 or 2. (section 16.0).
- Activating Hazard lights.
- Activating park lights.
- Park brake in released position

If sleep mode interferes with maintenance activities, a sleep mode override switch is available under the dashboard

- Position 1 = (pinned) Sleep mode active.
- Position 2 = All bus functions disabled.
- Position 3 = Sleep Mode override active.



18.0 Steering wheel lock .



Hazard

Steering wheel positioning is essential for an ergonomic setup. Adjusting it correctly ensures comfort, safety, and efficiency while reducing the risk of injury, minimising fatigue, and enhancing overall productivity.

The steering wheel height and angle can be adjusted by:

Locating the steering lock button on the steering column next to direction indicator and wiper stalks:

- Push the button into the adjustable position, move steering wheel column to the preferred position. You will have few seconds to complete this before the lock is automatically engaged



Once the desired position has been reached , return the switch to locked position. Lock will automatically engage after few seconds.

19.0 Emergency exits




Warning

Safety is the top priority for all passengers and public. If the vehicle needs to stop and be evacuated, ensure it is positioned in a clear and safe location before proceeding

Your BCI **EXPLORER** is fitted with **(5) six** emergency exits:

- Two roof hatch exists.
- Two break glass exists on driver's side of vehicle.
The front exist requires the removal of small side panel to increase exit size.
(Emergency Hammers are located internally at each exist).
- Existing in emergency is possible via the front passenger door.

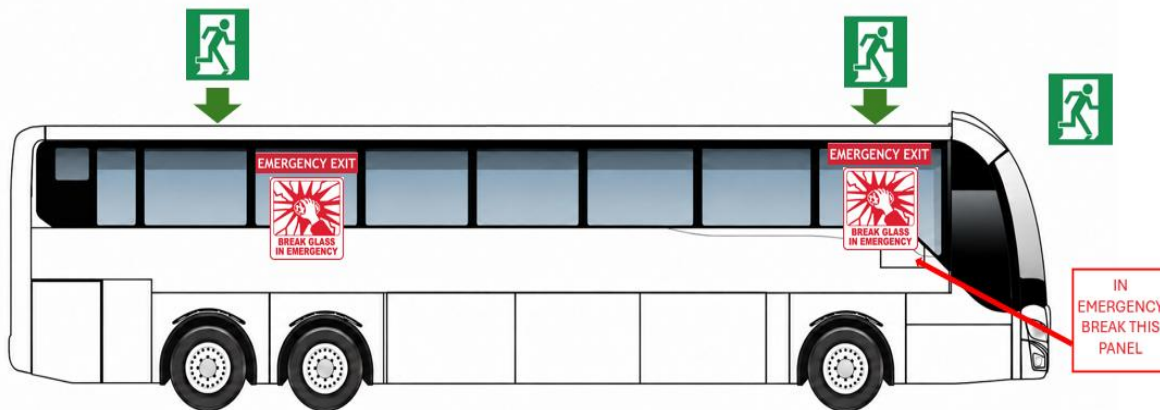

19.1 Emergency Internal operation

In the event of an emergency locate the manual release valve in the passenger door stairwell.

- Press the red tag (1), to release spring-loaded clear plastic cover.
- Rotate red handle (2) clockwise to manually release door pressure.
- Push the door open to exit the vehicle.



19.2 Emergency external operation

In the event of an emergency locate the manual release valve under the front left-hand corner.

- Rotate the red handle (1) 90° clockwise to manually release door pressure.
- Manually pull the door outwards to allow exiting.



19.3 Emergency roof exits




WARNING

Ensure the emergency exit is unobstructed and free from any hazards before utilising.

The **EXPLORER** is fitted with a roof mounted emergency exit, to utilised follow these instructions.

1. Remove and discard the clear plastic cover.
2. Move the red lever in the direction indicated by the arrows.
3. Push the hatch open and exit the vehicle when it is safe to do so.

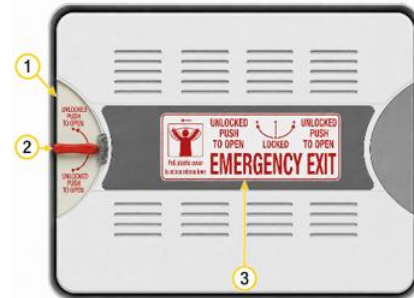

19.4 Fire suppression system (option)



WARNING

The fire suppression system must be inspected annually by an authorised **BCI** dealer. Cylinders must be recharged or replaced every five (5) years.

The **EXPLORER** can be equipped with an automatic fire suppression system located in the engine bay. This system can detect a fire and automatically discharge the suppression agent. It also allows for manual activation by the operator if required.


Manual Activation Procedure:

- Lower the front plastic cover.
- Press and hold the red button (2) for 1–2 seconds to release the suppression agent.
- Once activated, the button will illuminate, and a continuous buzzer will sound until the ignition power is reset.

System Function Test:

- When the ignition switch is turned on, the green LED within the fire suppression switch will illuminate, indicating the system is operational and free of faults.

If a fault is detected after ignition is turned on, the LED will illuminate yellow, and a buzzer will sound for approximately 5 seconds

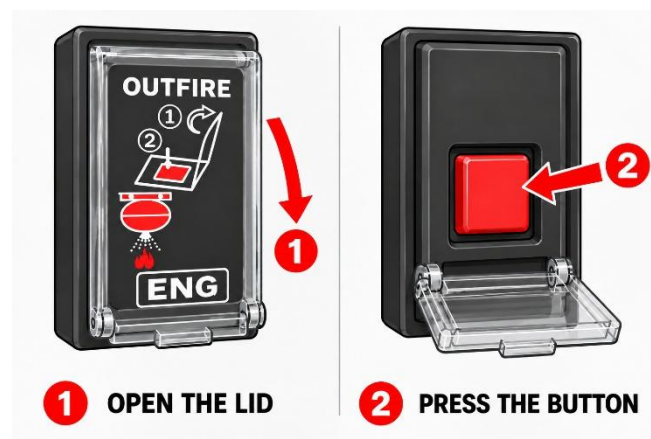

19.5 Emergency shut off



WARNING

The emergency switch is a critical safety function and should only be used in true emergency situations. It must not be used as part of normal operations.

An emergency switch is provided on the dash. To activate pull up on red toggle cover to break the seal exposing the toggle. Pulling up on toggle will:

- Isolates all main power supply.
- Shut the engine down.
- Unlock all door mechanisms.
- Activate hazard lights.



Returning the toggle cover to its original position will restore all systems.

19.6 Emergency interlock override



WARNING

The emergency override is a critical safety function and should only be used in true emergency situations. It must not be used as part of normal operations

The vehicle is equipped with an interlock system to prevent accidental movement during door operations.


If the vehicle experiences a system failure in a hazardous location and needs to be moved, an "Emergency Override" button is available on the dash. Pressing this button temporarily disables the interlock system, allowing the vehicle to be relocated safely only while the button is held. The door alarm warning will be activated once pushed (section 8.1) .



19.7 Emergency release luggage bins

If a luggage bin door locking mechanisms fails, a release valve is located within a service hatch on the right-hand side of the passenger door entry.

- Locate and open hatch.
- Rotate the red handle 90°.
- To reactivate the locks, turn red handle 90° back to its original position.

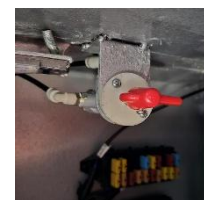

20.0 Door maintenance button



WARNING

All door maintenance or repairs must be carried out by an authorised repairer. This function is intended solely for maintenance purposes and must not be used during the vehicle's normal operation.

During a door safety system failure, it may be necessary to temporarily disable the system.

There is a "Door Maintenance" button provided within the main dash cavity for authorised staff. When pressed, the doors enter a maintenance mode.

In this mode, if the doors are not fully closed, the throttle interlock will release.

The brake interlock will remain active until either the throttle or brake pedal is pressed. Once pressed, the brake interlock is released, allowing the vehicle to be moved with the doors open.



Note: When the button is pressed, the "Door Alarm" and warning light will activate, and a timestamp of the event will be recorded in the door system.

To restore the safety functions, press the "Door Maintenance" button again.

If the door is not fully closed, the brake and throttle interlocks will be reactivated.

21.0 Additional systems and operating parameters



INFORMATION

Vehicles may be configured in different ways to meet specific customer, operational, or regulatory requirements.

As a result, the vehicle may be fitted with additional systems, warning lights, controls, safety features, or operational functions that differ from those described in this handbook.

Where the function, operation, or status of any system is unclear, contact an authorised **BCI** dealer or service representative for further information or assistance.

21.1 Luggage door warning

Depending on vehicle configuration, the luggage compartment doors may be monitored to provide audible and visual warnings.

Luggage Door Alarm

An audible and visual warning will sound if a luggage compartment door is open if the park brake is released.

Luggage Door Alarm with Halt Brake

If a luggage compartment door is opened while the park brake is released, audible and visual warnings will activate, and the halt brake will be applied automatically.

The warnings will be cancelled once the park brake is applied.

21.2 Rollaway function

The rollaway warning system is designed to alert the operator if the vehicle is left in an unsafe condition without the park brake applied.

Rollaway Alarm

An audible and visual warning will activate whenever the driver's seatbelt is released and either park brake is not applied, or where the engine is running and the vehicle is left in gear without the park brake applied.

Rollaway Park Brake Message

Provides the rollaway alarm together with the voice message:

“Warning, apply park brake immediately.”

Rollaway Alarm with Hazard Lights

Provides the rollaway alarm and automatically activates the hazard warning lamps.

Rollaway Alarm with Horn

Provides the rollaway alarm together with a pulsing vehicle horn.

Door Open / Park Brake Off Alarm

An audible warning will sound if the saloon door is open while the park brake is not applied.

This function is recommended in conjunction with **Door Action with Service Brake** is enabled.

Door Action with Service Brake

Allows the saloon door to only open if the service brake is applied.

Where this function is not enabled, saloon door operation is only permitted when the park brake is applied.

21.3 Lighting

Depending on vehicle specification or operating requirements , additional automatic lighting functions may be enabled.

Beacons On in Reverse Gear

Automatically activates the roof-mounted warning beacons when reverse gear is selected.

This function is generally used where the audible reverse alarm is disabled when the park lamps are switched on, helping to reduce noise during night-time operation.

Courtesy Lights with Door Remote

The interior courtesy lights will illuminate for approximately 1 minute and 30 seconds when the saloon door is operated using the remote control or external door switches.

The lights will switch off immediately if the ignition is turned to the ON position.

Courtesy Lights with Ignition Off

The interior courtesy lights will illuminate for approximately 1 minute and 30 seconds after the ignition is switched off. The lights will switch off immediately if the ignition is returned to the ON position.

Reverse Alarm Cancelled with Park Lights On

The reverse warning alarm is disabled whenever the park lamps are switched on.

Where this function is enabled, it should operate with **Beacons On in Reverse Gear** enabled to provide an additional visual warning.

Key ON – Lights ON

Automatically activates the low-beam headlamps whenever the ignition is switched to the ON position.

21.4 School Lights

School warning light operation may vary depending on the jurisdiction in which the vehicle is operated.

School Lights – QLD / SA / VIC / TAS

The vehicle can be configured for school warning light operation for Queensland, South Australia, Victoria and Tasmania. This configuration is considered the standard school light setting.

School Lights – NSW

The vehicle can be configured with the standard school warning light system, with flashing headlamps added to meet NSW operational requirements.

21.5 Child Check

The Child Check system is intended to prompt the operator to inspect the passenger saloon after completing a journey.

After the engine has been operating for approximately four minutes, the Child Check system is automatically armed.

When the ignition is subsequently switched off, the operator has approximately **50** seconds to walk through the passenger saloon and press the Child Check button located at the rear of the vehicle. If the button is not pressed within the required time, the vehicle horn will sound

21.6 Belt Check

Where fitted, the Belt Check system monitors passenger seatbelt status and integrates (section 11.0)

22.0 Accessory systems


22.1 Air conditioning



INFORMATION

The air conditioning system will vary based on customer configurations and specifications. For more details, contact the local authorised service agent for the relevant supplier.

22.2 Mobile climate control

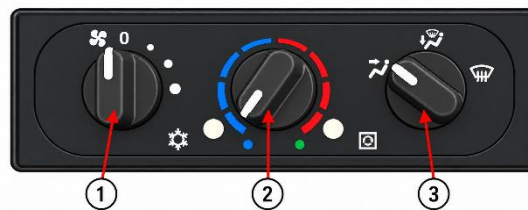

1	Fan speed control	3	Control mode
2	Temperature control		

22.3 Coachair controller



1	Fan only, off and full A/C	3	Display
2	Four level fan speed control	4	Temperature control